1850534
Adderley Cheval Mirror

Parts and Hardware List

A.	Mirror Support Posts	2 pcs
B.	Back Stretcher	1 pc
C.	Mirror Frame	1 pc
D.	Base Assembly	1 pc
E.	Feet	4 pcs
F.	Short Allen Head Bolts	4 pcs
G.	Long Allen Head Bolts	6 pcs
H.	Lock Washers	10 pcs
I.	Flat Washers	6 pcs
J.	Cast Dutch Screws	2 pcs
K.	Rubber Washers	2 pcs
L.	Wood Washers	2 pcs
M.	Allen Head Wrench	1 pc

* Please make sure that you have all the parts and hardware indicated above before you begin assembly of this item.
* Use the hardware illustrations to determine correct piece and size.
* This item should be assembled on a soft surface to prevent scratching the finish during assembly.
* This item may require periodic tightening.

1850534
Adderley Cheval Mirror
Hardware Illustrations

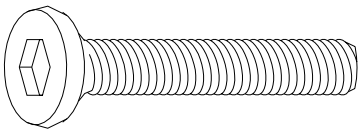

F. Short Allen Head Bolt

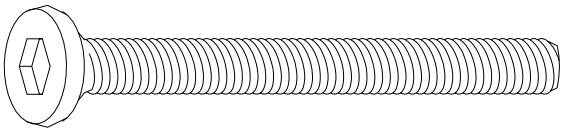

G. Long Allen Head Bolt



H. Lock Washer



I. Flat Washer

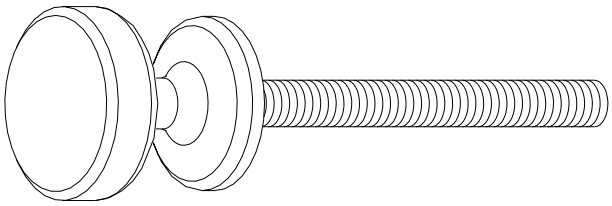

J. Cast Dutch Screw



L. Wood Washer

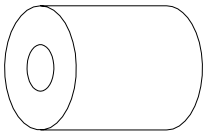

K. Rubber Washer

1850534
Adderley Cheval Mirror

Assemble Mirror

Parts required

A.	Mirror Support Posts	2 pcs	H.	Lock Washers	10 pcs
B.	Back Stretcher	1 pc	I.	Flat Washers	6 pcs
C.	Mirror Frame	1 pc	J.	Cast Dutch Screws	2 pcs
D.	Base Assembly	1 pc	K.	Rubber Washers	2 pcs
E.	Feet	4 pcs	L.	Wood Washers	2 pcs
F.	Short Allen Head Bolts	4 pcs	M.	Allen Head Wrench	1 pc
G.	Long Allen Head Bolts	6 pcs			
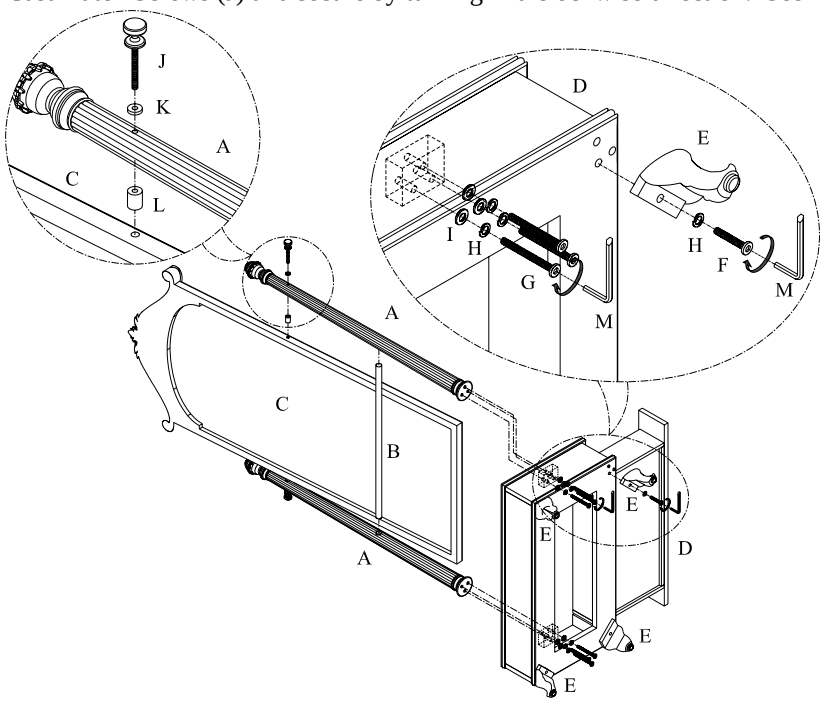
1. **Attach Feet (E)** Place the Base Assembly (D) upside down. Align the pre-drilled holes in the Feet (E) with the pre-threaded holes in the bottom of the Base Assembly (D). Secure with the Short Allen Head Bolts (F), and Lock Washers (H) using the Allen Head Wrench (M). See illustration.
2. **Attach Back Stretcher (B)** Insert the Back Stretcher (B) into the pre-drilled holes in the Mirror Support Posts (A). See illustration.
3. **Attach Mirror Support Posts (A)** Place the Base Assembly (D) down on one side and pull the draw half-way out. Align the pre-drilled holes in the Base Assembly (D) with the pre-threaded holes in the Mirror Support Posts (A). Secure in place with the Long Allen Head Bolts (G), Lock Washers (H) and Flat Washers (I) using Allen Head Wrench (M). See illustration.
4. **Attach Mirror Frame (C)** Place the Rubber Washers (K) over the exposed threads of the Cast Dutch Screws (J) and insert through the pre-drilled holes of the Mirror Support Posts (A). Place the Wood Washers (L) onto the exposed threads of the Cast Dutch Screws (J). Carefully align the pre-threaded holes of the Mirror Frame (C) with the threads of the Cast Dutch Screws (J) and secure by turning in a clockwise direction. See illustration.